



1

Attach the webbing or hooks to solid anchor points on the motorcycle and floor.

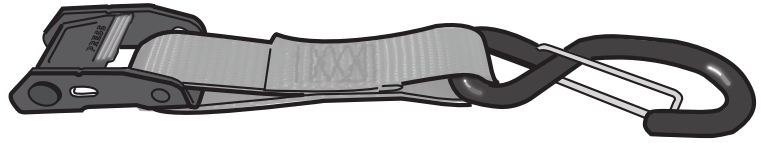


2

Feed the webbing through the buckle from bottom to top while holding down the buckle clip.

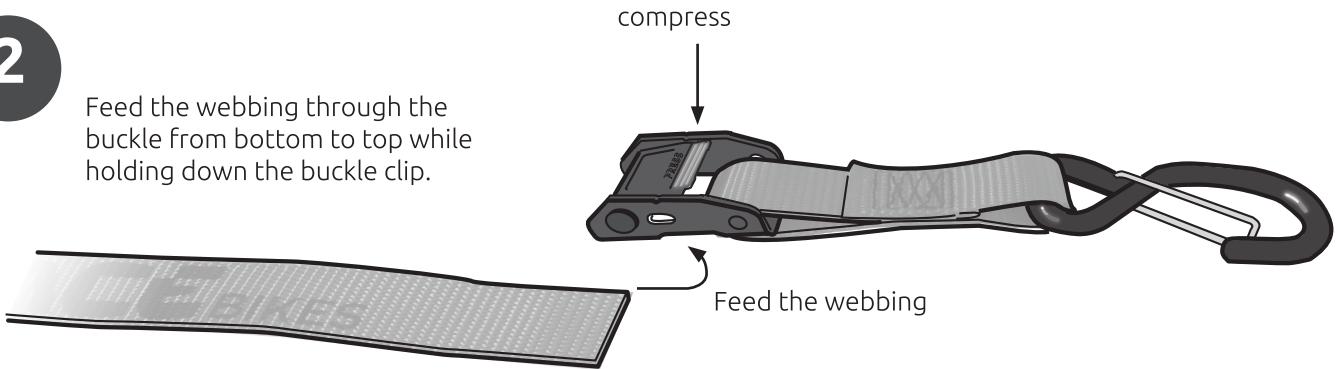

3

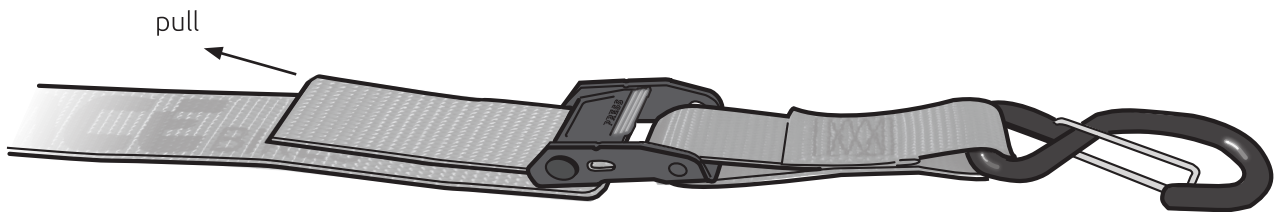


Pull the webbing up from the buckle to the desired tension is reached.

4

Secure the leftover strap with included velcro strapbinder.



5

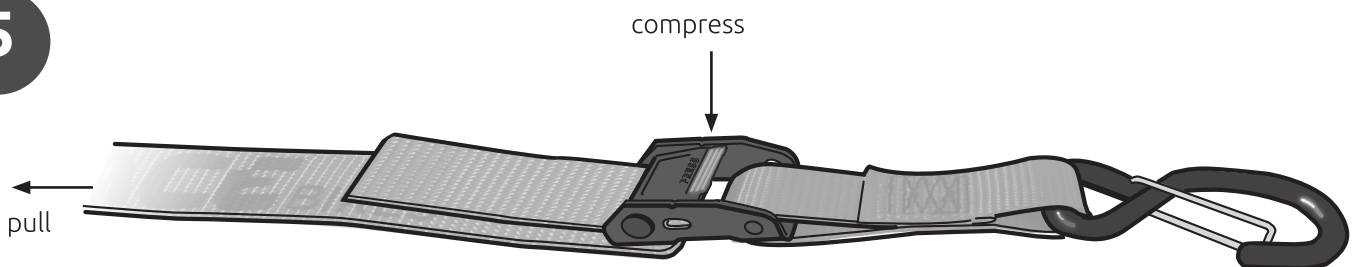

To release the cam buckle, compress the clip and pull the webbing out of the cam buckle.